



Assembly and installation guide

Before you start: ATTENTION

Please read these instructions through carefully before you start the installation. Incorrect product installation may result in serious product failure which will not be covered under your guarantee.


The wall profiles are designed to allow for 20mm adjustment when fitted to out of true walls. The thickness of the tiles used will affect the overall position of the assembly in situ.




Check the number of components to ensure you have all the parts listed and make sure you have the right tools to hand.

Two people are required for certain parts of the assembly and it is always recommended that a technically competent installer should undertake the installation.


Ensure that the enclosure is fitted to a level base. The wall plugs included with this product are suitable only for solid walls. Plasterboard or stud walls may require specialized fixings which are not provided. Handle all glass components with extreme care avoiding any damage to the corners and edges which may cause it to shatter.

TOOLS REQUIRED

DESCRIPTION	PART IMAGE
Tape measure	
Spritt level	
Pencil	
Ø6mm Drill bit	
Ø3mm Drill bit	
Protection eyeglasses	


DESCRIPTION	PART IMAGE
Drill	
Cross head Screwdriver	
Mallet	
Silicone Sealant	
Gloves	

ASSEMBLY INSTRUCTIONS - EXPLODED VIEW AND PARTS LIST

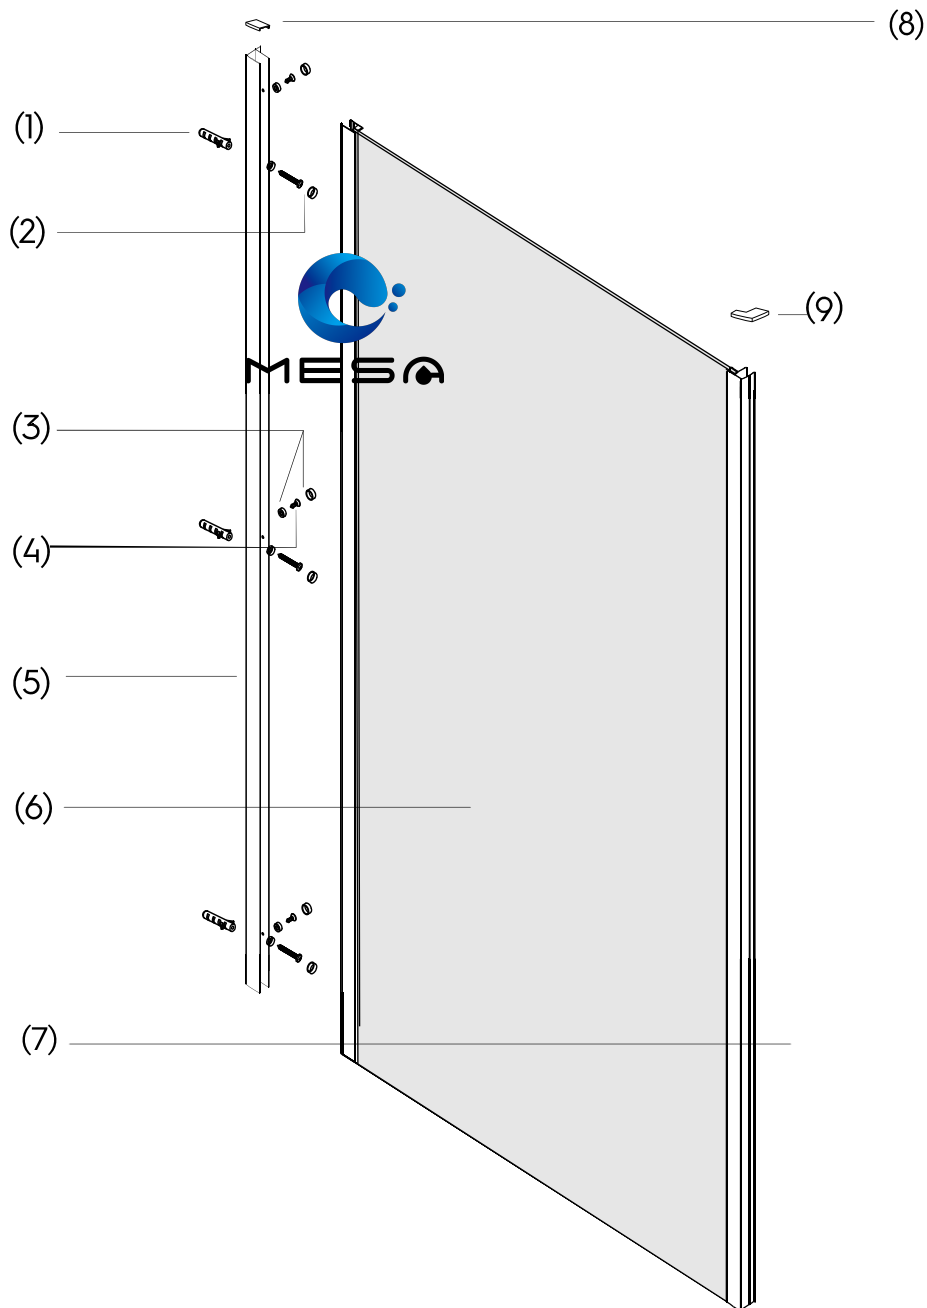

- (1) 3x Wall Plugs (A7)
- (2) 3x Screws 4x30 (A6)
- (3) 6 x Screw Cover Caps and Clips (A10)
- (4) 3x Screws 4x12 (A8)
- (5) 1x Wall Profile(A4)
- (6) 1x Glass side panel
- (7) 1x Corner post profile(A2)
- (8) 1x Wall profile top cover cap(A1)
- (9) 1x Corner post cover cap (A3)


COMPONENTS LISTING

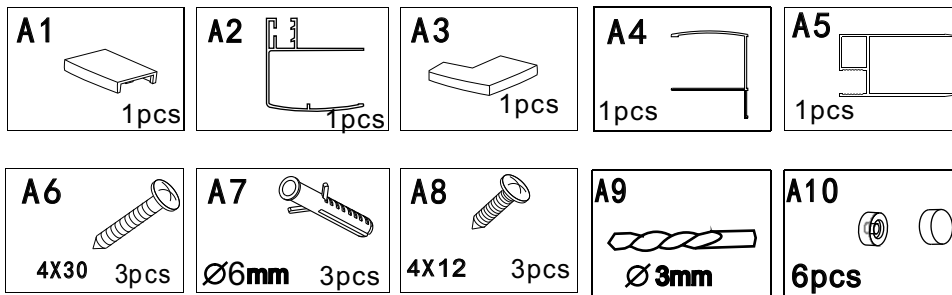

THIS SIDE PANEL IS A UNIVERSAL FITTING WITH ALL STRATOS 6+ SLIDING DOORS, BI-FOLD DOORS AND PIVOT DOORS

PLEASE NOTE:

PROFILE MINIMUM AND MAXIMUM ADJUSTMENTS FOR ALL SIZE:

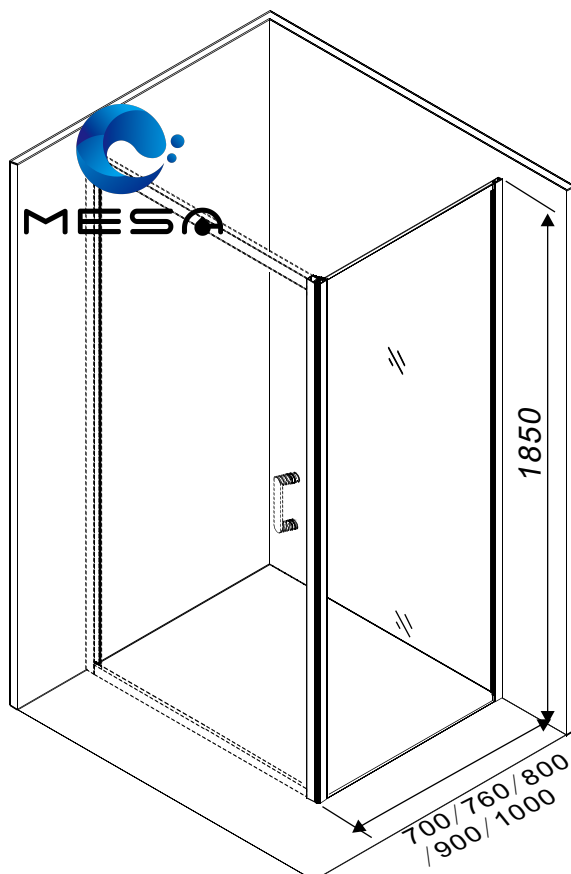


Model	Min adj.	Max adj.
700mm	670mm	690mm
760mm	730mm	750mm
800mm	770mm	790mm
900mm	870mm	890mm

ASSEMBLY INSTRUCTIONS

If you require help, we advise you to contact a competent plumber
Installation Steps

Step 1 - DRILLING THE WALL PROFILE TO THE WALL

MAKE SURE THE TRAY IS LEVEL USING A SPIRIT LEVEL BEFORE INSTALLING THIS SHOWER PANEL, ENSURE THE WALL PROFILE IS VERTICALLY PLUMB

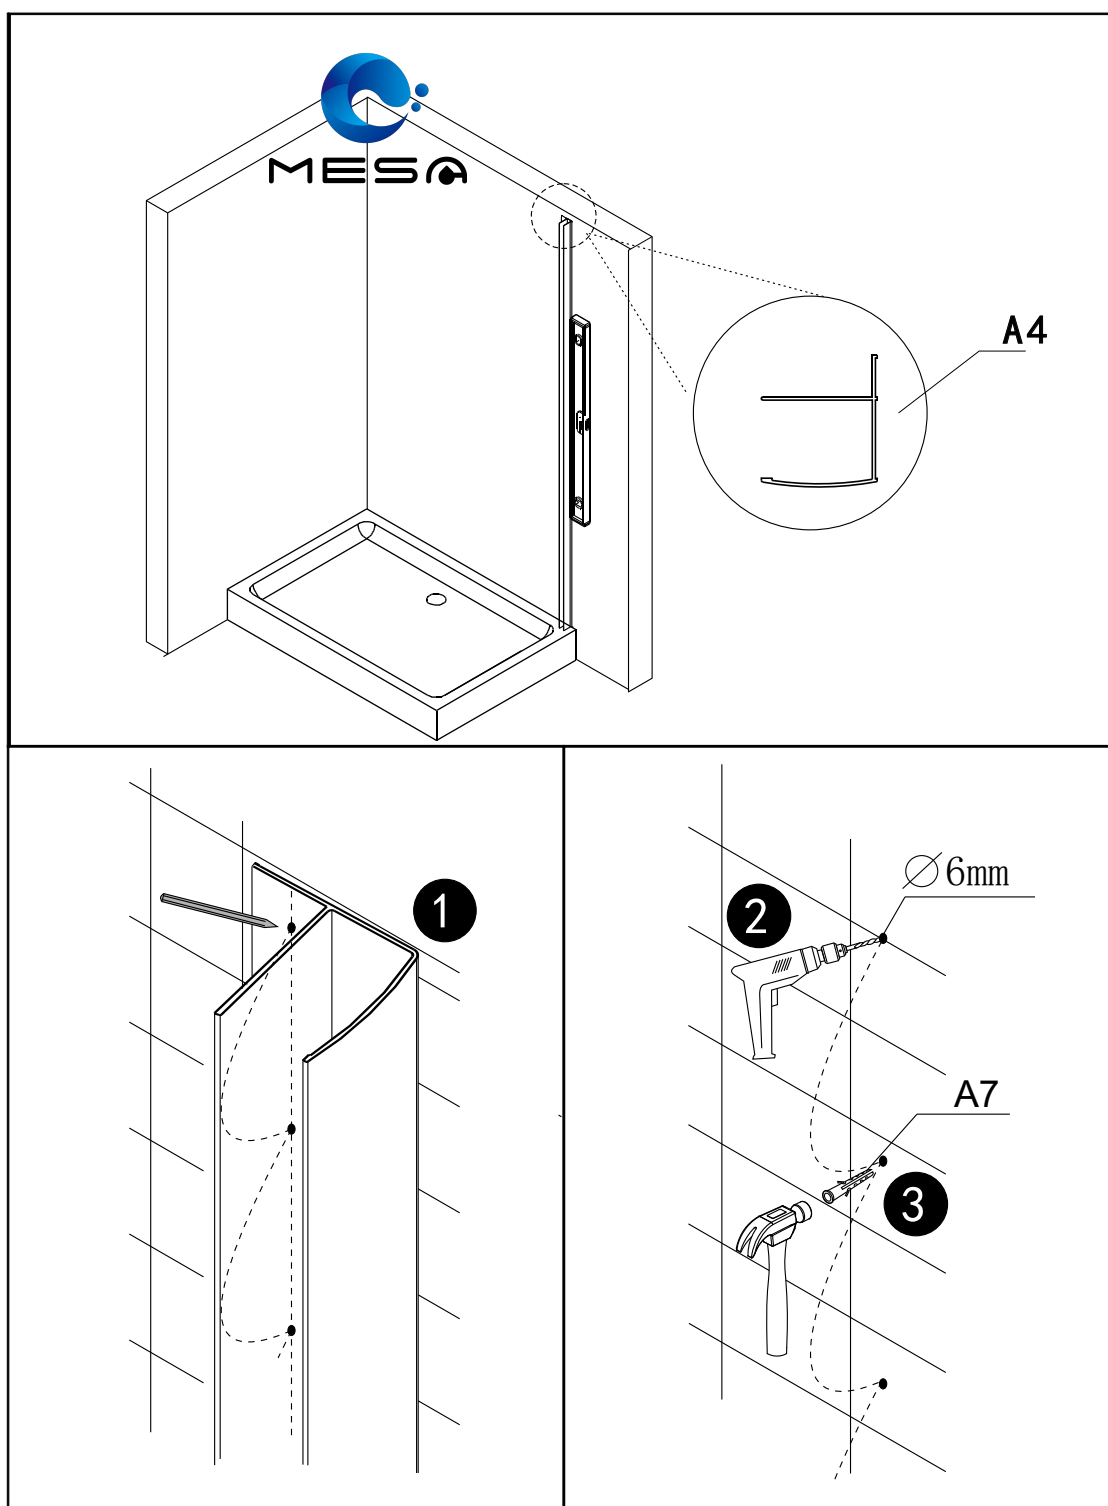


Step 2 - INSERT THE PANEL INTO THE WALL PROFILE.



FIX THE WALL PROFILE WITH THE SIDE PANEL FRAME AS SHOWN.

Step 3 -CONNECT THE CORNER PROFILE WITH MATCHING ENCLOSURE AT THE OPPOSITE SIDE AS SHOWN.

Gently squeeze the frame
into the wall post.

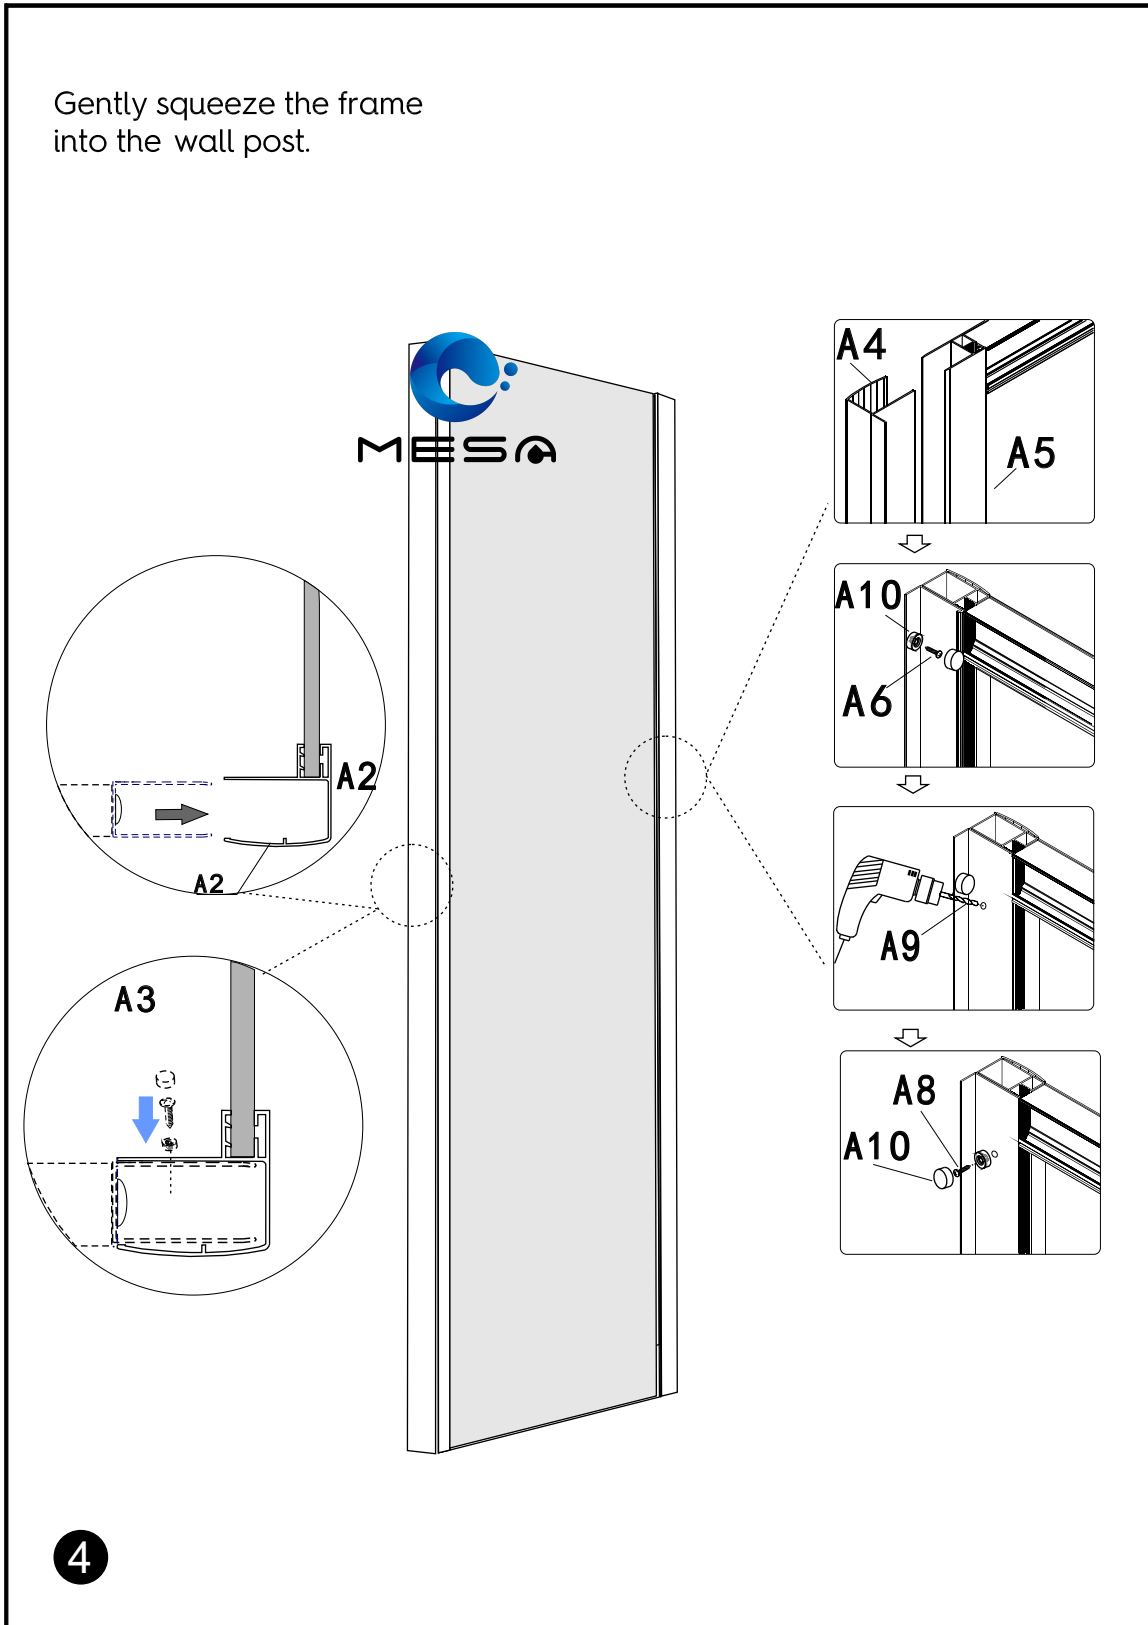

FIT THE PROFILE COVER CAPS

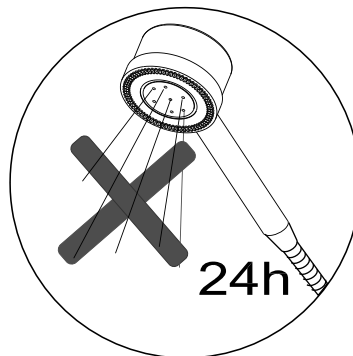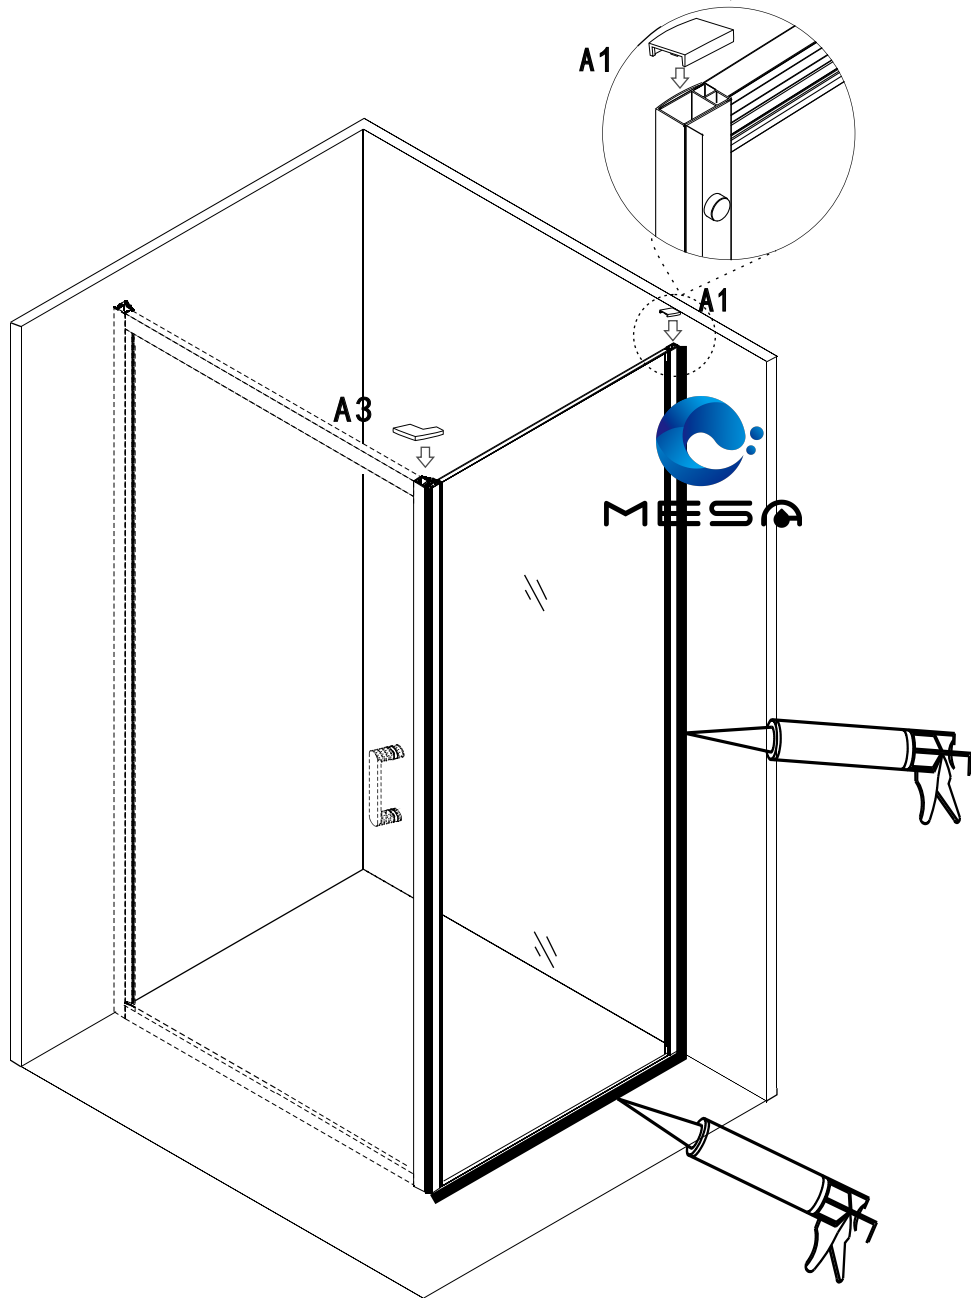

Allow 24 hours for silicone to dry before use .
Silicone on the outside edge only as shown



CARE AND MAINTANENCE:

It is important that you clean your shower enclosure after every use.

Soapy water is adequate to keep the glass clean however glass cleaner can be used if required. In hard water areas, insoluble lime scale may be deposited on the glass. If this is allowed to build up it becomes increasingly difficult to remove. Regular cleaning will minimise this effect.

NEVER use abrasive products or strong chemical cleaners on the glass.

Silicone spray may be used to lubricate rollers, hinges and other moving parts